

guitar pedal overdrive + boost **SviSound OverZoid oz01+**

OUTPUT Jack

Connect this jack to your amp or to the input of another effect unit.

AC Adaptor Jack

Accepts connection of an DC Adaptor.
Use only the correct DC adaptor 9 Volts with negative on central contact.

BOOST Knob

Adjusts the amount of output boost (when booster is activated).

INPUT Jack

Accepts signals coming from a guitar or another effect unit.

VOLUME Knob

Adjusts the volume.

GAIN Knob

Adjusts the amount of overdrive applied to the sound. Turning the knob clockwise boosts the overdrive effect.

TONE Knob

Adjusts the tone quality of the upper range.

FOOT Switch

This switch turns the effect on/off.

BOOST FOOT Switch

This switch activate output booster.

BOOST TYPE Switch

This switch choose type of output boost: mosfet or germanium.

LED Indicators

Shows whether the effect and boost is on.

BASS BOOST Switch

This switch boost low middle frequencies.

