

## guitar pedal overdrive

### SviSound OverZoid oz01 art edition

#### TONE Knob

Adjusts the tone quality of the upper range.

#### VOLUME Knob


Adjusts the volume.

#### TONE CORRECTION Switch

This switch change gain tone and boost gain to + 12 Db.

#### OUTPUT Jack

Connect this jack to your amp or to the input of another effect unit.

**9V**  **AC Adaptor Jack**  
Accepts connection of an AC Adaptor.

**!** Use only the correct AC adaptor 9 Volts with negative on central contact.

#### GAIN Knob

Adjusts the amount of overdrive applied to the sound. Turning the knob clockwise boosts the overdrive effect.

#### BASS BOOST Switch

This switch boost low frequencies before overdrive.

#### INPUT Jack

Accepts signals coming from a guitar or other musical instrument, or another effect unit.

#### LED Indicator

Shows whether the effect is on. Color changing from input signal.

#### FOOT Switch

This switch turns the effect on/on.

