

multi effects guitar pedal
delay - echo - reverb - chorus
SviSound EchoZoid ez01

OUTPUT Jack

Connect this jack to your amp or to the input of another effect unit.

REVERB Knob


Adjusts the amount of independent Reverb effect with or without (if LEVEL knob on ZERO level) other effects .

RATE Knob

Adjusts the delay time for "echo" effects or rate time for chorus.

MODE Switch

This switch change effects:
chorus - echo1 (delay) - echo2.

9V  **AC Adaptor Jack**
Accepts connection of an AC Adaptor.

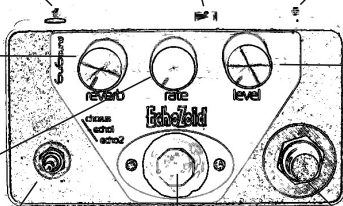
! **Use only the correct AC adaptor 9 Volts with negative on central contact.**

INPUT Jack

Accepts signals coming from a guitar or other musical instrument, or another effect unit.

LEVEL Knob

Determines how pronounced the "echo" or "chorus" effects. Turning the knob clockwise boosts the amount of effect.

**LED Indicator**

Shows whether the effect is on.

FOOT Switch

This switch turns the effect on/on.