


guitar pedal germanium auto wah

SviSound Ge Auto Wah

LOOP OUTPUT Jack

Connect this jack to OUTPUT of pedal connected to LOOP INPUT Jack.

9V  AC Adaptor Jack
Accepts connection of an AC Adaptor.

! Use only the correct AC adaptor 9 Volts with negative on central contact.

LOOP INPUT Jack

Connect this jack to INPUT of fuzz, overdrive or distortion pedal if you would get Way effect AFTER it.

OUTPUT Jack

Connect this jack to your amp or to the input of another effect unit.

INPUT Jack

Accepts signals coming from a guitar or other musical instrument, or another effect unit.



DEPTH Knob

Controls the sweep width (variable range) of the modulation effect. Clockwise rotation makes the range wider.

SENS Knob

Sets the filter level, tune this carefully to fit your guitar output and your playing touch.

RANGE Switch

Controls the range of the tuning frequency.
up - from low mid to high mid
down - from mid to high.

LED Indicator

Shows whether the effect is on.

FOOT Switch

This switch turns the effect on/on.