

guitar pedal high gain distortion **SviSound Techno-FU**

LED RATE Indicator

Flashing with frequency of LFO speed.

FREQUENCY Knob

Changing rate of LFO - speed of pulsing for phaser. Turning the knob clockwise make speed faster.

OUTPUT Jack

Connect this jack to your amp or to the input of another effect unit.

BRIGHT Knob

Selects the amount of feedback applied, make phase effect brighter when the knob turning clockwise.

FOOT Switch

This switch turns the effect on/on.

LED Indicators

Shows whether the effect is on.

RANGE Knob

Determines how far the phase shift varies. Turning the knob clockwise changing diapason of modulation from low vibrato to tremolo.

STAGES Switch and LED Indicators


Changing 2 or 4 stages of phase shifting. 2 stages provide vintage vibrato effect. 4 stages provide modern shifting sounds.

INPUT Jack

Accepts signals coming from a guitar or other musical instrument, or another effect unit.

DEPTH Knob

Controls the intensity of the Phaser effect. Turn the knob clockwise for a deep phaser sound.

9V  **AC Adaptor Jack**
Accepts connection of an AC Adaptor.

! Use only the correct AC to DC adapter 9 Volts with negative on central contact.

