

guitar pedal high gain distortion **SviSound Techno-FU**

TREBLE Knob

Adjusts the tone quality of the upper range.

MIDDLE Knob


Cutting the tone of the middle range. Turning the knob clockwise cut middle range.

OUTPUT Jack

Connect this jack to your amp or to the input of another effect unit.

VOLUME Knob

Adjusts the volume.

9V  **AC Adaptor Jack**
Accepts connection of an AC Adaptor.


! Use only the correct AC adaptor 9 Volts with negative on central contact.

GAIN Knob

Adjusts the amount of distortion applied to the sound. Turning the knob clockwise boosts the distortion effect.

INPUT Jack

Accepts signals coming from a guitar or other musical instrument, or another effect unit.

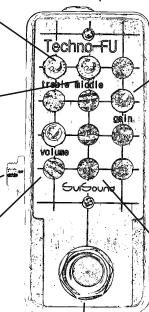

FOOT Switch

This switch turns the effect on/off.

LED Indicators

Shows whether the effect is on. And some is changing colors when pedal getting signal from a guitar.