

germanium overdrive/fuzz SviSound Techno-OV

GAIN 2 Knob

Adjusts the amount of output distortion applied to the sound (boost). Turning the knob clockwise boosts the distortion effect.

CLIPPING Button and LED indicators

Changing clipping for signal. 'High' mode provide more dynamic sound, 'low' mode - more sustain.

OUTPUT Jack

Connect this jack to your amp or to the input of another effect unit.

VOLUME Knob

Adjusts the volume.

FOOT Switch


This switch turns the effect on/off.

LED Indicators


Shows whether the effect is on.

TONE Knob

Adjusts the tone quality of the upper range.

9V  AC Adaptor Jack
Accepts connection of an DC Adaptor.

! Use only the correct AC to DC adapter 9 Volts with negative on central contact.

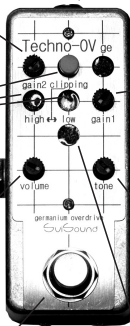

GAIN 1 Knob

Adjusts the amount of basic distortion applied to the sound. Turning the knob clockwise boosts the distortion effect.

INPUT Jack

Accepts signals coming from a guitar or other musical instrument, or another effect unit.